



ASSEMBLY INSTRUCTIONS Planet120 (BT-48J-NC) · Planet150 (BT-60J-NC) · Planet160 (BT-63-NC) · Planet180 (BT-71-NC)

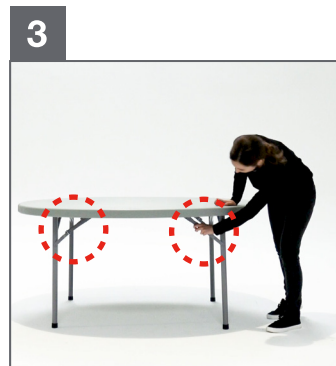

EN - To unfold

ES-Para desplegar / FR-Déplier / DE-Zum Ausklappen / IT-Aprire / PT-Para desdobrar / CA- Per desplegar / NL-Uitklappen / PO-ROZŁOŻENIE / RO-Extindere / BG-За разгъване / HU-Kinyitni
 EL-Για να ανοίξετε / TR-Açmak için / ع- للفتح / TH- วัสดุควรพับให้แบน / RU-Разложить / SV-Fäll upp / DA-Udklaping / NO-Brette ut / CS-Rozložit / SR-Da se rasklopi / HR-Rasklopiti /
 JA-広げる。/ ZH- 展开 / LT-Išskleisti / SK-Pre rozloženie / วัสดุควรพับให้แบน - HE

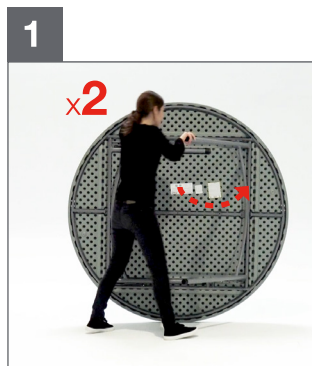

PUSH

x4

EN - To fold

ES-Para plegar / FR-Plier / DE-Zum Einklappen / IT-Piegare / PT-Para dobrar / CA-Per plegar / NL-Inklappen / PO-ZŁOŻENIE / RO-Piere / BG-За сгъване / HU-Összecsuni /
 EL-Για να κλείσετε / TR-Katlamak için / ع- للفتح / TH- วัสดุควรพับให้แบน / RU-Сложить / SV-Fäll ihop / DA-Sammenklaping / NO-Brette sammen / CS-Složít / SR-Da se sklopi / HR-Sklopiti /
 JA-折りたたむ。/ ZH- 折叠 / LT-Suskleisti / SK-Pre zloženie / วัสดุควรพับให้แบน - HE

